



Warranty card

Purchase Information

Model:


Serial No:

Date of purchase:

Invoice No/ Bill No:

Name and address of Dealer

Telephone Number:

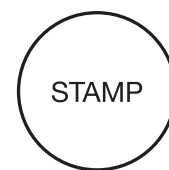

Attention!
This warranty card is valid only if it is stamped by the dealer.

SPG India PVT LTD. Gives a warranty of 2 years, commencing from the date of purchase on your vitek products This Warranty Card Should be retained and produced, should your product require service under the terms of the warranty.

In case of any problems please contact nearest authorised service center or customer care
Toll Free Number - 1800 266 0495

- 1 Within the 24 months of the date of purchase any replacement for the component(s) found to be defective material will be made and repairs executed free of charge by the company. Parts repaired or replaced are under warranty throughout the remainders of the original Warranty period only.
- 2 Only the company or its Authorized service Agents / Dealer can service/repair or attend to the above product.
- 3 This warranty does not cover any form of damage resulting from accident, Misuse, application of incorrect voltage or any use contrary to the operation instructions supplied with the product.
- 4 The company will not be responsible for any damage arising due to unauthorized modifications or alterations of any nature made to the product.
- 5 This company will not be responsible for any damages incurred during transit of the product.
- 6 This warranty is not valid if the serial no of the product has been deleted, defaced/altered.
- 7 This warranty does not cover the cost of transportation to the place of installation by the service center.
- 8 The warranty is issued subject to jurisdiction of Mumbai Court of law.
- 9 This warranty shall be confirmed to the purchaser of the product only.

Customer Care Toll Free - 1800 266 0495

SPG India PVT. LTD.
A/58, Giriraj Industrial Estate Mahakali Caves Road, Andheri East, Mumbai 400093, INDIA.
Email: customercare@vitek.in

www.vitek.in | Follow us on:

[f www.facebook.com/VitekAppliances](https://www.facebook.com/VitekAppliances) | www.twitter.com/vitekappliances | [Vitek India](https://www.instagram.com/vitekindia)



VT-1599 W-I

Sandwich maker

INSTRUCTION MANUAL



ENGLISH

SANDWICH MAKER VT-1599 W-I

The sandwich maker is intended for toasting bread slices and making hot sandwiches with various fillings.

DESCRIPTION

1. Power indicator (red)
2. Ready indicator (green)
3. Handles
4. Handle clip

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

SAFETY MEASURES

- Before using the electrical unit, read this instruction manual carefully and keep it for future reference. Use the unit for its intended purpose only, as specified in this manual. Mishandling of the unit may lead to its breakage and cause harm to the user or damage to his/her property.
- Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.
 - The power cord is equipped with a 3 pin plug. plug it into the socket with a reliable grounding contact.
 - To avoid risk of fire, do not use adapters for plugging the unit in.
 - To avoid mains overloading, do not switch on several electrical appliances with high power consumption at a time.
 - Place the unit on a flat, stable heat-resistant surface with free access to the mains socket.
 - Use the unit in places with proper ventilation.
 - To avoid fire, do not place the unit near curtains or blinds and do not cover it during operation.
 - Do not use the unit outdoors.
 - It is forbidden to use the unit in rooms where inflammable substances are stored or used.
 - Do not use the unit near gas-stoves or heaters; do not place the unit on hot surfaces.
 - Do not let the power cord hang from the edge of a table, or touch sharp edges or hot surfaces.
 - Do not twist the cord and do not wind it up around the unit body. A special cord storage is on the bottom of the sandwich maker body.
 - When unplugging the unit, pull the plug but not the cord.
 - Do not touch the power plug with wet hands.
 - Do not use the unit near a kitchen sink and do not expose the unit to moisture.
 - To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.
 - Check the power cord, the power plug and the unit body integrity periodically.
 - Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.
 - Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and contact to authorized service center or customer care toll free number.

- Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.
- Do not move the unit until it cools down completely.
- Never leave the operating unit unattended.
- Always unplug the unit if you are not using it or before cleaning.
- Before cleaning the unit let it cool down completely.
- To avoid fire, do not put very thick slices of bread into the sandwich maker and do not wrap them into foil.

ATTENTION! Take the sandwiches out of the unit right after cooking. Keeping sandwiches in the operating unit for a long time can burn them.

- Never use sharp objects to take foods out of the sandwich maker, it can damage the non-stick coating.
- Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.
- Do not allow children to touch the unit body and the power cord during operation.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- Transport the unit in the original package only.
- Keep the unit out of reach of children and disabled persons.
- This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

USING THE UNIT

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

- Unpack the unit, remove any stickers and package materials that can prevent unit operation.
- Check the unit for damages; do not use it in case of damages.
- Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.
- Clean the non-stick coating with a damp cloth or a sponge and then wipe it dry.

- Before using the unit for the first time, apply a little vegetable oil on the operating surface non-stick coating and spread it.
- Wipe excess oil with a paper cloth, close the unit, insert the plug into the mains socket for 5-10 minutes and then unplug the unit.

Note:

When using the unit for the first time, the heating elements' surface is burnt, which may produce a foreign smell. It is normal.

Making sandwiches

Press the handles (3) together and close the clip (4).

- Insert the power plug into the socket, the power indicator (1) will light up red.
- Once the preset temperature is reached, the ready indicator (2) will light up green.
- Open the sandwich maker and put a slice of bread on the lower non-stick surface; put the filling on the slice, cover with the second slice of bread, carefully press the handles (3) together and close the clip (4).

Warning:

Be careful when putting the ingredients as the upper and lower non-stick surfaces remain hot for a long time.

- Cook sandwiches for 6-8 minutes. After the indicator (2) goes out open the sandwich maker and check whether the sandwiches are ready. Depending on your taste, you can continue cooking until the indicator (2) lights up again or choose the cooking time at your discretion.
- After the sandwiches are ready, take the power plug out of the socket and open the unit lid.

Attention:

Unplug the unit only if the ready indicator (green indicator) is on to avoid sparking.

- Take out the ready sandwiches with the help of a wooden spatula. Do not use sharp metal objects in order not to damage the non-stick coating.
- Keep the unit closed if you are not using it.

Tips

- For the best results use medium slices of bread. Cooking time depends on the thickness of slices and sort of bread.
- You can use wheat flour bread as well as rye flour bread.
- Cut the bread into slices of required size.
- Use vegetable oil or ordinary margarine to smear the slices, as other fats burn fast. Smear the bread with some oil if you want your sandwich crispy. You can add herbs, garlic, some cinnamon or other spices to the oil.
- Do not put too much filling otherwise the bread slices will not be pressed together or the filling will leak.
- 1-2 spoons are usually enough. You can use anything for the filling: cooked meat or fish leftovers, fried mushrooms, jam, tinned fish, any boiled/roasted vegetables with a drop of mayonnaise or tomato sauce to make the filling juicier.
- Do not use filling from fresh vegetables that wilt under high temperature (lettuce, cucumber). You can have good results using tomatoes and onions.
- Limit the amount of food products containing too much moisture, such as mushrooms and tomatoes. You can use a small amount thereof as a filling, but if you put too much of them, the sandwich will turn mushy.
- Use only cooked meat – the sandwich maker only heats up the filling but doesn't cook it.

CLEANING AND CARE

- Clean the unit after every use.
- Disconnect the unit from the mains.
- Let the unit cool down completely, it is recommended to open the upper lid for this.
- Remove breadcrumbs, wipe the non-stick coating with a damp cloth, using a soft detergent, and then wipe the non-stick coating dry.
- Never use abrasives or metal scourers for cleaning the unit, as they can damage the inner non-stick coating or outer surface of the unit.
- Never immerse the unit into water!

WARNING:

When making sandwiches do not use aluminum foil, paper packaging or other objects, as they can cause fire.

STORAGE

- Clean the unit before taking it away for storage.
- Wind the power cord.
- Keep the unit away from children in a dry cool place.

DELIVERY SET

Sandwich maker – 1 pc.
Instruction manual – 1 pc.

TECHNICAL SPECIFICATIONS

Supply voltage: 220-240 V ~ 50 Hz
Power consumption: 750 W

The manufacturer reserves the right to change the specifications of the unit without a preliminary notification.

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.



This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)