
145MM

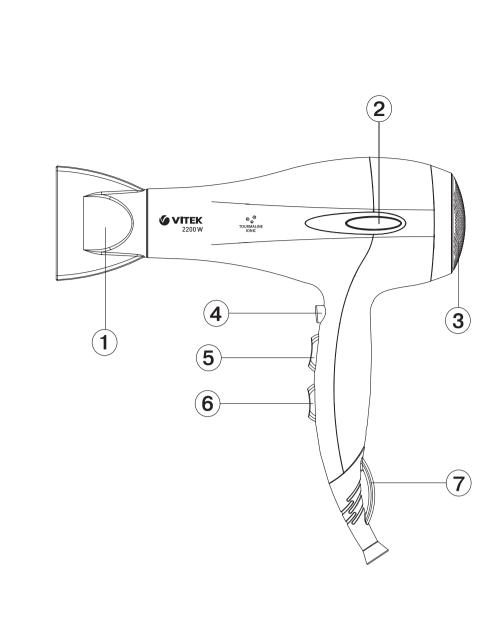

210MM

ENGLISH

HAIRDRYER VT-2329 R-I

The unit is intended for hair drying, curling and styling as well as for making hairstyles of different complexity.

Tourmaline Ionic technology

When heated up, the innovative Tourmaline Ionic grid coating emits negative ions, that lock hair scales, reduce static charge and make your hair silky smooth.

DESCRIPTION

- Nozzle
- 2. Operation indicator 3. Removable air inlet grid
- 4. Cool shot button * Heating degree switch
- 6. Air supply speed switch

Hanging loop

ATTENTION!

- Do not use the unit near containers filled with water (such as bath, swimming pool etc.).
- When using the hairdryer in a bathroom, disconnect it from the mains immediately after usage by pulling the power plug out of the mains socket, as water closeness is dangerous even if the unit is switched off.
- For additional protection you can install a residual current device (RCD) with nominal operation current not exceeding 30 mA into the bathroom mains; contact a specialist for installation.

SAFETY MEASURES

Read this instruction manual carefully before using the unit and keep it for the whole opera-

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage

and cause harm to the user or damage to his/ her property. • Before switching hairdryer on, make sure that • Take the operating unit by its handle only.

- your home mains voltage corresponds to unit operating voltage. To avoid fire, do not use adapters for connect-
- ing the unit to the mains.
- · Use the unit for intended purposes only, use
- only the attachments supplied with the unit. Never leave the operating unit unattended.
- · Do not switch the unit on in places where aerosols are sprayed or highly inflammable liquids are used.

- · Always unplug the unit after usage and before
- When unplugging the unit, pull the power plug but not the power cord.
- Do not touch the hairdryer body and the
- power plug with wet hands. · Do not place and do not keep the unit in places, where it can fall into a bath or a sink filled with water, do not immerse the unit into water or other liquids.
- Do not use the unit while taking a bath. If the unit is dropped into water, unplug it immediately and only then take it out of the
- · For children safety reasons do not leave polyethylene bags, used as a packaging, unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. **Danger of**

- suffocation! Do not allow children under 8 years of age to touch the unit body, the power cord or the
- power plug during operation of the unit. Do not leave children unattended to prevent using the unit as a toy.
- · Close supervision is necessary when children under 8 years of age or disabled persons are near the operating unit.
- This unit is not intended for usage by children under 8 years of age.
- This unit is not intended for usage by people (including children over 8) with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper
- Do not use the unit when you are drowsy.
- · Do not use the unit to style wet hair or syn-
- thetic wias Do not direct hot air into your eyes or other
- heat-sensitive parts of your body. Avoid contact of heated surfaces with your
- face, neck and other parts of your body. The nozzle gets hot during operation, allow it
- to cool down before removal.
- Do not drop the unit or insert foreign objects into any of the unit body openings.

Quick drying

hairdryer above your hair.

Natural wavy hair structure

fix each lock.

ENGLISH

- Never block the air inlets of the hairdryer, do **Hair care**
- · Avoid getting of hair into the air inlet grid dur-
- touch hot objects,
- be used as a handle for carrying the unit.
- To avoid damages, transport the unit in origi-

USAGE ONLY.

USING THE HAIRDRYER

After unit transportation or storage under cold (winter) conditions, it is necessary to the locks of the upper hair layer. keep it for at least two hours at room temperature before switching on.

- operating voltage of the hairdryer.
- Use the switch (6) to set the required air supply air between fingers. When the required effect is speed, the operation indicator (2) will light up: «**0**» – the hairdryer is off;

℀ – low speed;

% – high speed.

- Set the required temperature of the air flow using the switch (5):
-) low heating; **%** – medium heating;
- **\$\$\$** maximal heating.

smell and a small amount of smoke from the 2-5 seconds to fix hair. Styling time is determined heating element is possible, this is normal.

towel to remove excessive moisture and comb

Set the switch (5) to the maximal heating

position (position **()()**). Use the switch (6) to set

the required air supply speed and dry your hair.

Shake off excessive moisture from the hair with your hand or a comb and constantly move the

Set the switch (5) to the maximal heating posi-

tion (position **()**). Use the switch (6) to set the

required speed of air supply and dry your hair

switch (5) and decrease the air supply speed

straightening from the lower layers. Using a plain

or a round brush, comb the hair downwards and

your hair. This way, slowly straighten each lock from root to end. After you finish straightening

achieved, press the cool shot button (4) 💥 and

- not place the hairdryer on a soft surface, such To get the best results, wash your hair with shamas a bed or couch, where the air inlets may be poo (before drying and styling), dry it with a blocked. Keep the air inlets free of lint, dust,
- ing operation of the unit.
- It is recommended to unwind the power cord to its full length while using the unit.
- The power cord should not:
- run over sharp edges,
- · Check the power cord and power plug insula-
- tion integrity periodically.
- nal package only. Never use the unit if the power cord or plug is damaged, if the unit works improperly or after
- first. When the hair is almost dry, set the nozit was dropped. Contact an authorized service zle (1), decrease the heating degree using the center for all repair issues. cool down, never wind the power cord around Divide your hair into locks and layers and start

THE UNIT IS INTENDED FOR HOUSEHOLD simultaneously direct hot air from the nozzle at

the locks of the lower hair layer, start straightening the locks of the middle layer and finish with

• Before switching the unit on, make sure that Set the switch (5) to the low heating position

your home mains voltage corresponds to the (position \(\)), select the low air supply speed, setting the switch (6) to the position 2, grip Unwind the power cord completely. locks between fingers, turn them in the direc- Insert the power plug into the mains socket. tion of natural curling and dry them directing

Set the switches (5, 6) to the low heating and low speed position and attach the nozzle (1) to the

- hairdryer for directed air flow. Divide your hair into locks and create a required hair style by means of a round hair-brush. During
 - hair in the desired direction. individually according to hair type.

hair styling direct the air flow straight onto your

ENGLISH

Cool shot

This model is provided with cool shot mode for fixing your hairstyle. To fix your hairstyle press and hold the cool shot button (4) *.

Overheating protection This hairdryer has overheating protection that switches the unit off if the outgoing air is too hot. If the hairdryer is switched off during operation, switch it off with the switch (6) by setting it to the «0» position, unplug the hairdryer, make sure that the air inlets and outlets are unblocked and let the hairdryer cool down for 5-10 minutes. After that you can switch it on again. Do not block the air inlets during unit operation and avoid getting of hair into its air inlet.

MAINTENANCE AND CARE

- Set the switch (6) to the position «0» the **TECHNICAL SPECIFICATIONS** operation indicator (2) will go out – and then Power supply: 220-240 V ~ 50Hz unplug the hairdryer.
- The body of the hairdryer can be cleaned with a damp cloth, after that wipe the hairdryer dry. The manufacturer preserves the right to change Take the air inlet grid (3) and rotate it counter-
- clockwise, then remove the grid. • Clean the grid (3) with a brush, install the grid back to its place matching the ledges on the grid (3) with the grooves on the hairdryer body and turn the grid clockwise until Guarantee
- · Never immerse the unit into water or other
- Do not use abrasives and solvents to clean the unit.

STORAGE

- Always unplug the hairdryer if it is not being
- · Never wind the power cord around the hairdryer, as this can damage the cord. Handle

the power cord with care, do not pull, twist or stretch it, especially near the power plug or at the junction point. Straighten the cord periodically if it gets twisted during hairdryer

- operation. • For easy storing there is a hanging loop (7), you can store the unit by means of this loop provided that no water gets on the hairdryer
- in this position. Let the unit cool down after using it and keep it in a dry cool place out of the reach of children

DELIVERY SET

- Hairdryer 1 pc. . Nozzle – 1 pc.
- 3. Instruction manual 1 pc.

and disabled persons.

Power: 2200 W

the specifications of the unit without a preliminary notification.

Unit operating life is 3 years

5

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)



VT-2329 R-I

Hair dryer

INSTRUCTION MANUAL



Warranty card

| Purchase | information |
|-------------|-----------------|
| i di ciidoc | IIIIOIIIIatioii |

Hair drver VT-2329 R-I

Serial No.:

Date of purchase:

Invoice No.:

Seller information

Name and address of selling organization

Telephone number



Attention!
The Warranty card is valid only if stamped by the selling organization