


145MM

210MM

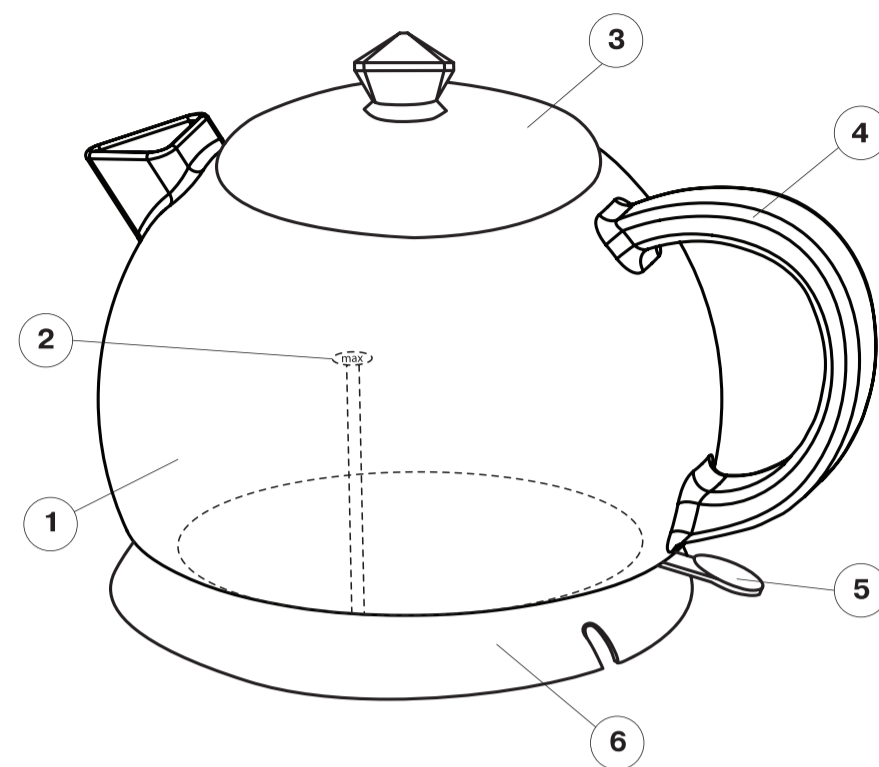

ENGLISH

KETTLE

Description

1. Body
2. -MAX- water level indicator
3. Lid
4. Handle
5. On/Off button -0/1- with operation indicator
6. Base

Attention!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD contact a specialist.

SAFETY MEASURES

Before using the unit, read these instructions carefully. Keep these instructions for future reference.

Use the unit for intended purposes only, as it is stated in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Make sure that your home mains voltage corresponds to the voltage specified on unit body.
- Power cord is equipped with "euro plug"; plug it into the socket with reliable grounding contact.
- In order to avoid risk of fire do not use adapters for connecting the kettle to the mains.
- Do not use kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.
- Do not use the kettle near heat sources and open flame.
- Do not use the kettle outdoors.
- Do not touch kettle body or handle with wet hands.
- Do not leave the operating kettle unattended.
- Place the kettle on the flat stable surface; do not place the kettle on the edge of the table.
- Before switching the kettle on make sure that it is placed on the base evenly.
- Use only the base supplied with the unit.
- Do not let the cord hang over the edge of a table, and make sure it does not touch hot surfaces. You can adjust the power cord length, winding it over the base.
- Do not switch the kettle on if it is empty.
- Do not fill the kettle with water when it stands on the base.
- Do not use the kettle if the lid is not closed tightly.
- Use the kettle only for water boiling. It is prohibited to heat or boil other liquids.
- Ensure that water level is not below the minimum mark and not above the maximal mark. If water level exceeds the maximal mark, boiling water can splash out.
- In order to avoid scalding by hot steam, do not bend over the kettle nose while it is operating.
- Be careful, the kettle lid gets hot during operation!
- Do not open the kettle lid while boiling.
- Do not touch hot surfaces of the kettle; take it only by the handle.
- Be careful while carrying the kettle filled with boiling water.
- Do not remove the operating kettle from the base. If you need to take the kettle off, first switch it off and then remove it from base.
- Unplug the unit before cleaning or when you do not use it. Unplugging the kettle, do not pull the cord, hold the plug.
- In order to avoid electric shock do not immerse the unit and base into water or other liquids.
- Do not wash the kettle and base in a dish-washing machine.
- Do not allow children to use the kettle as a toy.
- This unit is not intended for usage by children or disabled persons unless they are given all the necessary and understandable instructions by a person who is responsible for their safety on safety measures and information about danger that can be caused by improper usage of the unit.
- Keep the unit out of reach of children.
- For children safety do not leave polyethylene bags, used as a packaging, unattended.

Attention! Do not allow children to play with polyethylene bags or film. **Danger of suffocation!**

- Check the power cord and the plug periodically. Do not use the kettle if its body, base, power plug or power cord have damages.
- Do not repair the unit by yourself. If you find any damages, unplug the unit and apply to the authorized service center.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE USING THE UNIT FOR THE FIRST TIME

After unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the kettle.
- Make sure that operating voltage of the unit corresponds to voltage of your mains.
- Insert the power plug into the mains socket.

- To fill the kettle with water take it off the base (6), open kettle lid (3).
- Fill the kettle with water till the «MAX» water level indicator (2), close the lid (3) and place the kettle on the base (6). Make sure that the lid (3) is closed tightly.
- Switch the kettle on by pressing the On/Off button (5), the operation indicator will light up.
- When water starts boiling, the kettle will be switched off automatically. Pour out water and repeat boiling procedure 2-3 times.

Attention! Ceramic lid (3) gets hot during operation, be careful when opening the lid to re-fill the kettle.

Note:

- Before using the kettle make sure that the on/off button (5) is not blocked by any foreign objects, and the lid (3) is tightly closed, otherwise auto switch off of kettle is not possible.
- Before removing the kettle from the base make sure that kettle is switched off and on/off button (5) is in position "0".

USAGE

- Insert the power plug into the mains socket.
- To fill the kettle with water take it off the base (6), open kettle lid (3). Fill the kettle with water not below the «MIN» mark and not exceeding the «MAX» mark.
- Place the lid (3) back to its place, set the filled kettle on the base (6).
- Switch the kettle on by pressing the On/Off button (5), the operation indicator will light up.
- When water starts boiling, the kettle will be switched off automatically.
- Before removing the kettle from the base (6) make sure that it is switched off.
- After switching the kettle off wait for 10-20 seconds, then you can switch it on again for re-boiling.
- If you accidentally switched the kettle on, but the water level appeared to be below the minimal mark, the automatic thermal switch will be on and the kettle will be switched off automatically. In this case take the kettle from the base (6), let it cool down for 5-10 minutes, then fill it with water and switch on, the kettle will operate in normal mode.

CLEANING AND CARE

- Before cleaning, disconnect the unit from the mains, pour out water and let the unit cool down completely.
 - You can wipe the outer surface of the kettle with a damp cloth or sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
 - Do not immerse the kettle and base into water or other liquids.
 - Do not wash the kettle and base in a dish washing machine.
- Descaling**
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and heating element.
 - To remove scale, fill the kettle with a mixture of one part ordinary vinegar and two parts water till the MAX mark.
 - Boil the liquid and leave it overnight. In the morning pour out the liquid, fill the kettle with water till the MAX mark, boil and pour out water.
 - You can use special detergents for electric kettles to remove scale.
 - Clean the kettle from scale regularly.

STORAGE

- Before taking the kettle away for storage, unplug it, pour out water and let the unit cool down.
- Keep the kettle away from children in a dry cool place.

DELIVERY SET

Kettle – 1 pc.
Base – 1 pc.
Instruction manual – 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated power : 1800 W
Maximal water capacity: 1.3 L

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

Unit operating life is 5 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

VT-1171 W-I

Kettle

INSTRUCTION MANUAL


Guarantee card

Purchase information

Model: Serial No.: Date of purchase: Invoice No.:

Seller information

Name and address of selling organization

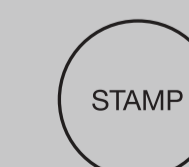Telephone number: 

Attention!
The guarantee card is valid only if stamped by the selling organization.