

## ENGLISH

### HAIR STRAIGHTENER VT-2312 Y-I

The unit is intended for hair straightening.

#### DESCRIPTION

1. Heating plates and outer operating surfaces
2. Handle
3. Temperature control buttons «+/-»
4. ON/OFF button
5. ON/OFF indicator of the heating element
6. Protection cap

#### IMPORTANT SAFETY MEASURES

##### ATTENTION!

- Do not use the unit near containers filled with water (such as bath, swimming pool etc.).
- After using the unit in a bathroom, unplug it by taking the power plug out of the mains socket, as closeness of water is dangerous, even if the unit is switched off.
- For additional protection you can install a residual current device with nominal operation current not exceeding 30 mA into the mains; contact a specialist for installation.
- **Make sure that the heating plates do not touch fusible and inflammable objects (plastic, polyethylene, synthetic materials etc.).**

#### SAFETY MEASURES

Before using the unit, read this instruction manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before switching the unit on, make sure that your home mains voltage corresponds to the unit operating voltage.
- Do not switch the unit on in places where aerosols are sprayed or highly inflammable liquids are used.
- It is recommended to unwind the power cord to its full length while using the unit.
- The power cord should not:
  - touch hot objects,
  - be immersed into water,
  - run over sharp edges of furniture,
  - be used as a handle for carrying the unit.

3

## ENGLISH

- Do not touch the unit, the power cord or power plug with wet hands.
- Before using the unit, examine the power cord closely and make sure that it is not damaged. Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.
- Do not dismantle the unit by yourself. If any malfunction is detected, contact the nearest authorized service center.
- Do not use the unit while taking a bath.
- Do not use the unit outdoors.
- Do not hang or keep the unit in places where it can fall into a bath or a sink filled with water; do not immerse the unit body, power cord or power plug into water or other liquids.
- If the unit is dropped into water, unplug it immediately and only then take it out of the water. Apply to the nearest authorized service center for testing or repairing the unit.
- Never leave the operating unit unattended.
- Do not use the unit when you are drowsy.
- Do not use the unit to style wet hair or synthetic wigs.
- Avoid contact of hot surfaces of the unit with your face, neck or other open parts of your body.
- Take the switched on unit by its handle only. Do not touch the heating plates and operating surfaces while using the unit.
- When unplugging the unit, pull the power plug but not the power cord.
- Always unplug the unit after usage and before cleaning.
- Be careful! The heating plates and surfaces stay hot for some time after the unit is switched off.
- Before you take the unit away, be sure to let it cool down, never wind the power cord around the unit.
- Clean the unit regularly.
- Do not allow children to touch the unit body and the power cord during the unit operation.
- This unit is not intended for usage by children under 8 years of age.
- Children aged 8 and over as well as disabled persons can use this unit only under supervision of a person who is responsible for their safety, if they are given all the necessary and understandable instructions concerning

4

## ENGLISH

the safe usage of the unit and information about danger that can be caused by its improper usage.

- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons do not leave polyethylene bags used as packaging unattended.
- **Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**
- Transport the unit in the original package.
- Keep the unit in a dry cool place out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

#### BEFORE THE FIRST USE

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the unit and remove any stickers that can prevent unit operation.
- Check the unit for damages, do not use it in case of damages.
- Before switching the unit on, make sure that your home mains voltage corresponds to the unit operating voltage.

#### USAGE

Wash your hair with shampoo, dry it with a hairdryer and comb it before styling.

##### Notes:

- **Do not let heating plates contact with fusible or flammable objects. Place the unit on a heat-resistant flat surface only.**
- During the first operation some foreign smell and a small amount of smoke from the heating plates is possible, this is normal.
- When setting the temperature, remember that the plates heat up fast and cool down much longer.
- **Attention! The outer surface of the body heats up strongly, so touch the unit in the area of the handle (2) only.**
- Avoid contact of heated surfaces with your face, neck and other parts of your body.

5

## ENGLISH

- Do not comb your hair right after styling, let it cool off. Divide the locks with your fingers carefully to make them look natural.

- Remove the protection cap (6).
- Insert the power plug into the mains socket.
- Switch the unit on by pressing the button (4).
- Set the temperature of the heating plates (1), using the buttons (3) «+/-», the indicator (5) will be flashing. Remember that the heating plates get hot faster than they cool down.

| Hair type                        | Temperature           |
|----------------------------------|-----------------------|
| Damaged, colored, bleached, fine | from +155° to +170°C  |
| Normal                           | from +170°C to +200°C |
| For professional styling         | from +200°C to +230°C |

- Place the unit on a flat heat-resistant surface.
- When the heating plates (1) reach the set temperature, the indicator (5) will glow constantly.
- Divide the hair into locks not wider than 4-5 cm each.
- Take the unit by the handle (2), take a hair lock with the free hand.
- Place the hair lock between the plates (1) and press them together. Slowly slide the hair straightener throughout the hair length.
- You can curl the end of the lock; to do this, press the hair between the heating plates (1) and wind the hair around the outer operating surfaces. Wait for several seconds and release the lock by opening the heating plates (1).
- After styling, press the button (4), the indicator (5) will go out.
- Unplug the unit.
- Place the unit on a flat heat-resistant surface and let it cool down completely.
- Press the heating plates (1) together and put the protection cap (6) on.

#### CLEANING AND CARE

- Before cleaning, unplug the unit and let it cool down completely.

6



VT-2312 Y-I

Hair straightener

# INSTRUCTION MANUAL



## Warranty card

#### Purchase information

Model: **Hair straightener VT-2312 Y-I**

Serial No.:


Date of purchase:

Invoice No.:

#### Seller information

Name and address of selling organization

Telephone number:

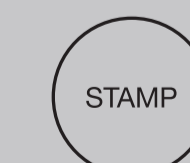

Attention!  
The Warranty card is valid only if stamped by the selling organization.