



ENGLISH

KETTLE

Description

1. Kettle body
2. Mesh filter
3. Lid opening button
4. Lid
5. Water level scale
6. Handle
7. Illuminated On/Off button
8. Base
9. Cord storage

Attention!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD contact a specialist.

SAFETY MEASURES

Before using the electric kettle, read this instruction carefully. Keep this instruction for further reference.

Use the electric kettle for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Make sure that the kettle operating voltage corresponds to the voltage of your mains.
- Power cord is equipped with "euro plug"; plug it into the socket with reliable grounding contact.
- To avoid fire or electric shock do not use adapters for plugging the unit in.
- Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.
- Do not use the kettle near heat sources and open flame.
- Do not use the kettle outdoors.
- Do not touch the kettle body or handle with wet hands.
- Do not leave the operating kettle unattended.
- Place the kettle on a flat stable surface; do not place the kettle on the edge of the table.
- Before switching the kettle on make sure that it is placed on the base evenly.
- Use only the base supplied with the unit.
- Do not let the cord hang from the edge of the table and make sure it does not touch hot surfaces. You can adjust the power cord length, winding it around the base.
- Do not switch the kettle on if it is empty.
- Do not fill the kettle with water when it already stands on the base.
- Do not use the kettle if the lid is not closed tightly.
- Use the kettle only for water boiling. It is prohibited to heat or boil other liquids.
- Ensure that water level in the kettle is not below the minimal mark «0.5L» and not above the maximal mark «MAX». If water level exceeds the maximal mark, boiling water can splash out.

- To avoid burns by hot steam, do not bend over the kettle's spout while it is operating.
- Do not open the kettle lid while water boiling.
- Do not touch hot surfaces of the kettle, take it only by the handle.
- Be careful while carrying the kettle filled with boiling water.
- Always unplug the unit before cleaning; the unit should be also unplugged when you do not use the kettle. When unplugging the unit pull the plug but not cord.
- To avoid electric shock do not immerse the unit and base into water or any other liquids.
- Do not wash the kettle and base in a dishwashing machine.
- Do not allow children to use the kettle as a toy.
- For children safety reasons do not leave polyethylene bags, used as a packaging, unattended.
- **Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**
- This unit is not intended for usage by children or disabled persons unless they are given all the necessary and understandable instructions by a person who is responsible for their safety on safety measures and information about danger that can be caused by improper usage of the unit.
- From time to time check the power cord insulation, the power plug should not have any damages. Do not use the kettle if its body, base, power plug or power cord have damages.
- Do not repair the unit by yourself. If you find any damages, unplug the kettle and apply to an authorized service center.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE THE FIRST USE

After unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the kettle.
- Make sure that operating voltage of the unit corresponds to voltage of your mains.
- Insert the power plug into the mains socket.
- To fill the kettle with water take it off the base (8) and open the lid (4) by pressing the lid opening button (3).
- Fill the kettle with water till the «MAX»-mark on the water level scale (5), close the lid (4), place the kettle on the base (8). Make sure that the kettle lid (4) is closed tightly.
- Switch the kettle on by pressing the button (7), the button (7) will be illuminated.
- Once water starts boiling, the kettle will switch off automatically. Pour out water and repeat the boiling procedure 2-3 times.

Note: Before using the kettle make sure that the On/Off button (7) is not blocked by any foreign objects, and the lid (4) is tightly closed, otherwise auto switch off of kettle is not possible.

USAGE

- Insert the power plug into the mains socket.
- To fill the kettle with water take it off the base (8) and open the lid (4) by pressing the lid opening button (3).
- Place the filled kettle on the base (8).
- Switch the kettle on by pressing the button (7), the button (7) will be illuminated.
- Once water starts boiling, the kettle will switch off automatically.
- Before removing the kettle from the base (8) make sure that it is switched off.
- After switching the kettle off wait for 10-20 seconds, then you can switch it on again for water re-boiling.
- If you accidentally switched the kettle on, but the water level appeared to be below the minimal mark, the automatic thermal switch will be on and the kettle will switch off. In this case take the kettle from the base (8), let it cool down for 5-10 minutes, then fill it with water and switch it on, the kettle will operate in normal mode.

CLEANING AND CARE

- Before cleaning, disconnect the unit from the mains, pour out water and let the kettle cool down.
 - Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
 - Do not immerse the kettle and base into water or any other liquids.
 - Do not wash the kettle and base in a dishwashing machine.
 - Regularly clean the mesh filter (2) from dirt and scale. Place the kettle in a way that the spout is turned towards you, open the lid (4), take the filter by its upper part and draw it out. It is recommended to wash the mesh filter (2) under water jet, after slightly cleaning it with a brush. Install the mesh filter (2) to its place, press the upper part of the filter (2) till you hear the distinctive click of the clamps.
- Descaling**
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and heating element.
 - To remove scale, fill the kettle with a mixture of one part ordinary vinegar and two parts water till the maximal water level mark. Boil the solution and leave it in the unit overnight. In the morning pour out the solution, fill the kettle with water till the maximal mark, boil and pour the water out.
 - You can use special detergents for electric kettles to remove scale, strictly following the instructions on their usage.
 - Clean the kettle from scale regularly.

STORAGE

- Before taking the kettle away for long storage, unplug it, pour out water and let the unit cool down.
- Fix the power cord in the cord storage (9).
- Keep the kettle away from children in a dry cool place.

DELIVERY SET

Kettle with filter – 1 pc.
Base – 1 pc.
Instruction manual – 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V - 50 Hz
Power: 1850-2200 W
Maximal water capacity: 1.7 l

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

Unit operating life is 5 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.



This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)



VT-1176 BK-I

KETTLE

INSTRUCTION MANUAL



Warranty card

Purchase information

Model:

Serial No.:


Date of purchase:

Invoice No.:

Seller information

Name and address of selling organization

Telephone number:

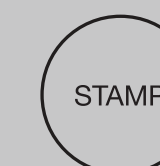

Attention!
The Warranty card is valid only if stamped by the selling organization.