

## ENGLISH

## VACUUM CLEANER

## Description

1. Vacuum cleaner ON/OFF button
2. Vacuum cleaner handle
3. Portable vacuum cleaner release button
4. Battery
5. Battery clamps
6. Portable vacuum cleaner handle
7. Charge/operation indicator
8. Portable vacuum cleaner ON/OFF button
9. Dust bin release button
10. Dust bin
11. Electric brush clamp
12. Electric brush with operation indicator
13. Battery charging base
14. Cord storage
15. Small brush
16. Furniture brush
17. Crevice nozzle

## Dust bin:

18. HEPA filter
19. Foam filter
20. Separator
21. Separator lid
22. Brush holder clamp
23. Brush holder
24. Cylindrical brush

## SAFETY MEASURES

Read this instruction manual carefully before using the unit and keep it for the whole operation period. Use the unit according to its intended purpose only, as it is stated in this user manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

To avoid hazard of electric shock, fire and injury follow the rules specified below.

- Before connecting the unit to the mains, make sure that voltage specified on the unit corresponds to the mains voltage at your home.
- Do not leave the plugged in vacuum cleaner unattended. Always remove the plug from the socket after charging the battery.
- Do not use the vacuum cleaner for collecting water or other liquids.
- Do not use the power cord as a handle for carrying the base or the vacuum cleaner; do not let the power cord come in contact with sharp corners or edges of furniture.
- Place the charging base as close to the wall as possible to avoid damaging the unit in case of dropping.
- When unplugging the base pull the plug but not the cord.
- Do not touch the power plug with wet hands.
- Do not cover the unit outlets with any foreign objects.
- Keep hair, free hanging clothes, fingers and other parts of your body away from the vacuum cleaner suction opening or electric brush rotation zone.
- Close supervision is necessary while cleaning the stair landings.
- Do not use the vacuum cleaner for collecting of such inflammable liquids as gasoline and solvents; do not use the unit in the places where such liquids are stored.
- Do not use the vacuum cleaner for collecting water and other liquids, burning or smoking cigarettes, matches, cinders, as well as fine dust, for example, that of plaster, concrete, flour or ashes.
- Do not use the vacuum cleaner, if the separator, the HEPA filter and the foam filter are not installed in the dust bin;
- Make sure regularly that the power cord and the plug are not damaged. Do not try to repair the unit by yourself. Contact an authorized service center for all repair issues.
- For children safety reasons do not leave polyethylene bags, used as a packaging, unattended.
- **Attention!** Do not allow children to play with polyethylene bags or film. **Danger of suffocation!**
- Never allow children to use the unit as a toy. Close supervision is necessary when children or disabled persons are near the unit.
- This unit is not intended for usage by children or disabled persons unless they are given all the necessary instructions by a person who is responsible for their safety on safety measures and information about danger that can be caused by improper usage of the unit.

4

## ENGLISH

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

## ASSEMBLING OF THE VACUUM CLEANER

After the unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the vacuum cleaner completely and check it for damages. Do not use the unit in case of damages.
- Before connecting the battery charging base (13) to the mains, make sure that voltage in your mains corresponds to the unit operating voltage.

- You can adjust the power cord length, winding it over the cord storage (14).

## More tips

- The first three charging of a new battery should be performed after its total discharging (when you even cannot switch the vacuum cleaner on).
- Duration of every charging cycle should be not less than 12 hours.
- The following charging cycles can be stopped once the indicator (7) lights up green.

## Notes:

- It's impossible to use the vacuum cleaner during the battery charging.
- Do not detach the portable vacuum cleaner from the electric brush body and the brush from the base (13) during the battery charging.
- Flashing of brush indicator (12) means that the control scheme works improperly. In this case unplug the unit and apply to the authorized service center.

## Assembling of the electric brush

- Connect the handle (2) to the unit body and fix it with a screw (pic. 2).
- Insert the electric brush (12) into the air inlet in the bottom part of the unit body (pic. 3) till the clamp clicking. To detach the electric brush (12) press the clamp (11) and remove the brush.

- Install the portable vacuum cleaner into the electric brush body (pic. 4), it will be fixed. To detach the portable vacuum cleaner take the handle (6) and press the release button (3).
- Set the electric brush on the charging base (13) (pic. 5).

## BATTERY CHARGING

For proper battery operation the unit is provided with control system: the vacuum cleaner will be switched off if the battery voltage goes below the set value.

- Place the base (13) as close to the wall and the socket as possible, and set the assembled vacuum cleaner with electric brush on the base (13).
- Insert the power plug into the socket, the charge indicator (7) will light up. While bat-

5

## ENGLISH

light up green. Press the button (8) to switch the vacuum cleaner on.

## WARNING: Do not use the portable vacuum cleaner handle (6) for carrying the electric brush.

- To switch the vacuum cleaner off press the button (1 or 8) again.

## Using of the portable vacuum cleaner

- To detach the portable vacuum cleaner take the handle (6) and press the release button (3).
- Install the necessary attachment to the air inlet of the dust bin (10).

## Small brush (15)

- The small brush (15) is intended for cleaning furniture surface, pile prevents the damage of polished furniture surface.

## Furniture brush (16)

The attachment (16) is intended for cleaning of fabric surfaces of upholstered furniture.

## Crevice nozzle (17)

- The crevice nozzle (17) is intended for cleaning of radiators, chinks, corners and spaces between cushions.

## Note:

- Install the small brush (15) on the furniture brush (16) (pic. 6), you can detach the small brush (15) easily.
- For easy operation and storing of the attachments you can use the crevice nozzle (17) as an extender and set the furniture brush (16) on it.
- Store the attachments on the base (13) using the special ledge.
- Switch the unit on by pressing the button (8); the operation indicator (7) will light up green.
- To switch the vacuum cleaner off press the button (8) again.

## CLEANING AND CARE

Remove garbage and dust from the dust bin (10), disassemble and clean it after every usage of the vacuum cleaner.

## Detaching of the dust bin (10) and removal of dust and garbage from it

- Switch off the vacuum cleaner.
- To detach the portable vacuum cleaner take the handle (6) and press the release button (3).

- Holding the dust bin (10) press and hold the release button (9), remove the dust bin (10) (pic. 7).
- Place the dust bin (10) above the trash bin, remove the HEPA filter (18), foam filter (19) and separator (20) (pic. 8).
- Remove accumulated dust and garbage from dust bin (10).
- Clean the separator (20) from garbage and dust; open the lid (21) to clean the separator (20) cone.
- Wash the HEPA filter (18) and foam filter (19) under a warm water jet and dry thoroughly (pic. 9). Do not wash the filters (18, 19) in a dish washing machine.
- Dry the filters (18, 19) thoroughly before installing them. Do not dry filters with a hair dryer (pic. 9).

## Assembling of the dust bin (10)

- **Note: Dry all the parts thoroughly before assembling of the dust bin (10).**

- Make sure that the separator (20) lid (21) is closed.
- Install the separator (20) into the dust bin (10) body.
- Install the foam filter (19) into the HEPA filter (18) plastic body.
- **Attention! Make sure that the foam filter (19) is installed correctly and the cut on the filter matches the ledge on the HEPA filter body (18).**
- Install the HEPA filter (18) with the foam filter (19) into the dust bin (10).

- **Attention! Make sure that the HEPA filter (18) body with the foam filter (19) is installed correctly into the dust bin and the cut on the HEPA filter (18) body matches the ledge in the dust bin (10).**

- Install the dust bin (10) on the portable vacuum cleaner, until the clamp (9) clicks.

## portable vacuum cleaner body, electric brush body, charging base

- Wipe the portable vacuum cleaner body, electric brush body, charging base with a soft slightly damp cloth, then wipe them dry.
- Do not immerse the portable vacuum cleaner body, electric brush body, charging base, the power cord and the power plug of the unit into water or other liquids. Provide that no

6

## ENGLISH

water gets inside the portable vacuum cleaner body, electric brush body and the charging base (13).


- Never use solvents or abrasives to clean the surfaces, parts and attachments.
- Do not wash the HEPA filter (18), the foam filter (19), the separator (20), the dust bin (10) body in a dish washing machine.
- Do not dry the HEPA filter (18) and the foam filter (19) with a hair dryer.

## Cleaning of the electric brush (12)


- Detach the electric brush (12) from the body by pressing and holding the release button (11).


- To detach the cylindrical brush (24) turn the clamp (22) to the position . Use a blade screwdriver or an appropriate coin to do it.


- Remove the fixing pad (23) (yellow).
- Detach the cylindrical brush (24) from the body.


- Clean the cylindrical brush (24) from garbage.
- Install the cylindrical brush (24) back to its place.
- Install the fixing pad (23) (yellow) back to its place.
- Turn the pad clamp (22) to the position .

 
- Clean the cylindrical brush (24) from garbage.
- Install the cylindrical brush (24) back to its place.
- Install the fixing pad (23) (yellow) back to its place.
- Turn the pad clamp (22) to the position .

 
- Turn the pad clamp (22) to the position .

 
- Turn the pad clamp (22) to the position .

 
- Turn the pad clamp (22) to the position .

 
- Turn the pad clamp (22) to the position .


- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .


- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

- Turn the pad clamp (22) to the position .

7



VT-1819 SR-4

Vacuum cleaner

## INSTRUCTION MANUAL