



ENGLISH

PEDICURE SET

Instruction manual
This set is used for manicure or pedicure.

Description

1. Body
2. Battery compartment
3. Attachment rotation speed switch «0/1/2»
4. Attachment/protection screen setting place
5. Protection screen

Attachments

6. Large coarse roller
7. Large fine roller
8. Small coarse roller
9. Small fine roller
10. Smoothing disc
11. Cone attachment
12. Felt cone attachment
13. Thin cylindrical attachment

SAFETY MEASURES

Before using the pedicure set, read this instruction carefully. Keep these instructions for further reference. Use the unit according to its intended purpose only, as it is stated in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

Attention! Batteries leakage can cause injuries or device damage. To prevent damages, follow the rules specified below:

- Insert batteries strictly following the polarity.
- Take batteries out if you are not going to use the device for a long time;
- Do not recharge or disassemble the batteries, do not expose them to high temperature;
- Replace batteries in time.
- Do not use the unit if your skin or nails are damaged.
- Before using the unit, consult a doctor if you have diabetes or vascular disease.
- **To ensure proper operation of the unit, it is recommended to switch it off for 15 minutes after every 20 minutes of continuous operation.**
- Do not use the unit near heat sources or open flame.
- Do not immerse the unit body into water or other liquids.
- Do not use the unit while taking a bath or a shower. Do not place or keep the unit in places where it can fall into a bath or sink filled with water.
- Use only the attachments supplied.
- Do not leave the operating unit unattended.
- Unplug the unit before cleaning, changing the attachments or when you do not use it.
- Clean the unit regularly.
- Do not allow children to touch the unit body during the operation.
- This unit is not intended for usage by children under 8 years of age.
- This unit is not intended for usage by people (including children over 8) with physical, neural, mental disorders or with insufficient experience or knowledge. Such persons can use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.
- Do not leave children unattended not to let them use the unit as a toy.
- For children safety reasons do not leave polyethylene bags, used as a packaging, unattended.
- **Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**
- Do not dismantle the unit by yourself. If any malfunction is detected or after it was dropped, apply to the nearest authorized service center.
- Transport the unit in the original package only.
- Keep the unit out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE THE FIRST USE

After unit transportation or storage at low temperature, it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the unit completely and remove any stickers that can prevent unit operation.
- Check the unit for damages; do not use it in case of damages.
- Wipe the unit body (1) with a soft, slightly damp cloth and then wipe dry.
- Rub the protection screen (5) and the attachments (6-13) with rubbing alcohol to disinfect them.

Installation of batteries

- Open the battery compartment lid (2) by sliding it towards you.
- Insert 2 «AA» batteries, strictly following the polarity (see the marks inside the battery compartment).
- Close the battery compartment lid (2).

USAGE**Manicure and pedicure attachments**

- To protect your eyes during the manicure or pedicure procedure install the protection screen (5) into the setting place (4). The protection screen rotates around its axis clicking distinctively when its position is locked.
- Install the necessary attachment (6-13) on the installation place (4). The attachments are installed on the magnetic axis with inner locking system, that's why it is recommended to turn the attachment slightly around its axis for proper installation and fixing. If the attachment is set properly, you'll hear a distinctive click.

Note: the grinding disc (10) is used without the protective screen (5)

- Use the switch (3) to select the required attachment rotation speed:

«0» - the unit is off,

«1» - low speed,

«2» - high speed.

Note:

We recommend to use the lower rotation speed for nail treatment and the higher rotation speed for roughened skin treatment.

- After having finished the unit operation, set the switch (3) to the position «0».

ATTACHMENTS

We suggest the following options of using the manicure/pedicure attachments.

Attention: Always switch the unit off with the switch (3) before installing or changing the attachments.

Carefully move the attachment along the surface being treated.

Use coarse rollers (6, 8) to remove rough skin from your feet.

Use fine rollers (7, 9) to remove rough skin from hands, feet and from between the toes.

Use the smoothing disc (10) to shape your nails.

Use the cone attachment (11) to treat rough skin and nails.

Use the felt cone attachment (12) to polish nails and give them additional glare.

Use the thin cylindrical attachment (13) to remove sections of rough skin around the nails

Tips

Follow these recommendations to keep your nails healthy and achieve good results when using the pedicure set:

- Avoid getting of irritant chemicals on your nails.
- Do not expose your hands and feet to cold temperature. Always wear warm clothes when it's cold.
- Good nail hydration is a key to healthy and strong nails, resistant to nail peeling and fragility.
- Polish your nails before using a moisturizer.
- After a manicure procedure treat your nails with moisturizing cream or lotion.
- Use only high quality nail polish to prevent nail peeling.
- Before removing cuticles first moisturize them and then lift gently.
- For safe cuticle removal, use manicure clip-pers instead of scissors.
- To prevent nail thinning, smoothen and polish your nails with 7-10 days intervals.

Cleaning and care

- Switch the unit off before cleaning.
- Wipe the unit body (1) with a soft, slightly damp cloth and then wipe it dry.
- Do not use abrasive substances and solvents to clean the unit.
- Never immerse the unit body (1) into water or other liquids.
- Rub the protection screen (5) and the attachments (6-13) periodically with rubbing alcohol to disinfect them.

Storage

- Clean the unit.
- Remove the batteries from the battery compartment.
- Keep the unit away from children in a dry cool place.

Delivery set

Unit body – 1 pc.
Protection screen – 1 pc.
Attachments – 8 pcs.
«AA» batteries - 2 pcs.
Instruction manual – 1 pc.

Technical specifications

Power supply: 2 «AA»-type batteries, 2x1,5 V

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

Unit operating life is 3 years**Guarantee**

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

INSTRUCTION MANUAL