



ENGLISH

MULTISTYLER

The unit is intended for hair straightening and curling.

Description

1. Protective tip
2. Operating surface
3. Clamp
4. Case
5. Lever
6. Rotary switch «straightener/OFF/tongs»
7. Temperature indicators
8. Temperature setting buttons «+/-»
9. Power indicator
10. Handle
11. Hanging loop

IMPORTANT SAFETY MEASURES

ATTENTION! Do not use the unit near containers filled with water (such as bath, swimming pool etc.).

- Every time after using the unit in a bathroom, unplug it by taking the power plug out of the mains socket, as closeness of water is dangerous even if the unit is switched off.
- For additional protection you can install a residual current device (RCD) with nominal operation current not exceeding 30 mA; contact a specialist for installation.

Attention! During heating and operation, put the unit on a flat steady heat-resistant surface.

SAFETY MEASURES

Before using the unit, read this instruction manual carefully and keep it for further reference. Use the unit according to its intended purpose only, as it is stated in this instruction manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before switching the unit on, make sure that your home mains voltage corresponds to the unit operating voltage.
- Do not switch the unit on in places where aerosols are sprayed or highly inflammable liquids are used.
- It is recommended to unwind the power cord to its full length while using the unit.
- The power cord should not:
 - touch hot objects,
 - be immersed into water,
 - run over sharp edges of furniture,
 - be used as a handle for carrying the unit.
- Do not touch the unit, the power cord or power plug with wet hands.
- Before using the unit, examine the power cord closely and make sure that it is not damaged. If you find any damages of the power cord, do not use the unit.
- Do not use the unit while taking a bath.
- Do not use the unit outdoors.
- Do not put or keep the unit in places where it can fall into a bath or a sink filled with water; do not immerse the unit body, the power cord and the power plug into water or any other liquids.
- If the unit is dropped into water, unplug it immediately and only then take it out of the water. Apply to the nearest authorized service center for testing or repairing the unit.
- Never leave the operating unit unattended.
- Do not use the unit when you are drowsy.
- Do not use the unit to style wet hair or synthetic wigs.
- Avoid contact of hot surfaces of the unit with your face, neck or other open parts of your body.
- Place the unit on a flat heat-resistant surface. Make sure that the operating surface does not touch the surface on which the unit is set.
- Take the switched on unit by its handle only. Do not touch the operating surface while using the unit.
- Be careful! The heating plates stay hot for some time after the unit is switched off.
- Before taking the unit away for storage, be sure to let it cool down and never wind the power cord around the unit body.
- When unplugging the unit, pull the plug but not the power cord.
- Unplug the unit after every usage and before cleaning.
- Clean the unit regularly.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons do not leave polyethylene bags, used as a packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**
 - Do not allow children to touch the unit body and the power cord during the unit operation.
- This unit is not intended for usage by children under 8 years of age.
- Children aged 8 and over as well as disabled persons can use this unit only under supervision of a person who is responsible for their safety, if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.
- Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.
- Do not dismantle the unit by yourself. If any malfunction is detected, contact the nearest authorized service center.
- To avoid damages, transport the unit in original package only.
- Keep the unit in a dry cool place out of reach of children and disabled persons.

Attention! Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- Do not allow children to touch the unit body and the power cord during the unit operation.
- This unit is not intended for usage by children under 8 years of age.
- Children aged 8 and over as well as disabled persons can use this unit only under supervision of a person who is responsible for their safety, if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.
- Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.
- Do not dismantle the unit by yourself. If any malfunction is detected, contact the nearest authorized service center.
- To avoid damages, transport the unit in original package only.
- Keep the unit in a dry cool place out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE THE FIRST USE

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the unit and remove any stickers that can prevent unit operation.
- Check the unit for damages, do not use it in case of damages.
- Before switching the unit on, make sure that your home mains voltage corresponds to the unit operating voltage.

USAGE

Before styling wash your hair with shampoo, dry with a hairdryer and comb. Style dry hair only.

Notes:

- During the first operation some foreign smell and a small amount of smoke from the operating surface is possible, this is normal.
- While setting the temperature, remember that the operating surface heats up fast but cools down much longer.

Attention!

- **The operating surface (2) heats up strongly, therefore touch the unit by the handle (10) only.**
- Avoid contact of heated surfaces of the unit with your face, neck and other open parts of your body.
- During breaks in operation, put the unit on a flat heat-resistant surface. Always make sure that the operating surface (2) does not touch the surface on which the unit is set.
- **The rotary switch (6) is used for switching the unit on/off and hair styling mode selection.**
- Do not comb your hair right after styling, let it cool off. Divide the locks with your fingers carefully to make them look naturally.

Switching the unit on and setting the temperature

- Take the case (4) off and insert the power plug into the socket.
- Select «straightener» or «tongs» function. To do so, hold the unit by the handle (10), and turn the switch (6) with the free hand in the necessary direction as far as it will go. The unit will be switched on, the indicators (7, 9) will be flashing.
- Use the buttons (8) to set the required heating temperature of the operating surface (2).

Note: The default heating plates' temperature is +190°C.

Hair type	Temperature, °C
Damaged, colored, bleached, fine	+150°C, +160°C
Normal, wavy	+170°C, +180°C
Coarse and unruly	+190°C, +200°C

- Place the unit on a flat heat-resistant surface so that the operating surface (2) does not touch it.
- Once the operating surface (2) reaches the set temperature, the indicators (7) will glow constantly and the indicator (9) will be flashing.
- Divide the hair into locks not wider than 4-5 cm each.
- Take the unit by the handle (10), take a hair lock with the free hand.

Hair straightening

- Press the lever (5), place a lock of hair between the plates and bring the lever down. Slowly slide the straightener throughout the hair lock length.

Hair curling

- Press the lever (5), place the end of the lock on the operating surface (2) and bring the clamp (3) down. Wind the lock around the operating surface.
- Wait for a while, then press the lever (5) and release the hair lock.

Switching the unit off

- After styling turn the switch (6) to the «OFF» position, the indicators (7, 9) will go out. Unplug the unit.
- Place the unit on a flat heat-resistant surface and let it cool down completely.
- Put the case (4) on the handle (10).

Blocking

To avoid accidental pressing of the buttons (8) while using the unit, activate the blocking function. To do so, press the buttons (8) «-» and «+» simultaneously and hold them down for over 2 seconds, the indicator (9) will glow constantly. To switch the blocking off, press the buttons (8) «-» and «+» simultaneously and hold them down for over 2 seconds, the indicator (9) will be flashing.

Automatic switch off

The unit is switched off automatically after 30 minutes of non-operation.

Cleaning and care

- Before cleaning, unplug the unit and let it cool down completely.
- Do not immerse the unit, the power cord and the power plug into water or any other liquids.
- Do not use abrasive detergents or any solvents to clean the unit.
- Wipe the unit body and the operating surface with a soft slightly damp cloth, and then wipe them dry.

Storage

- Let the unit cool down completely and make sure that the unit body is clean and dry before taking it away.
- Never wind the power cord around the unit body as it can damage the cord.
- Keep the unit away from children in a dry cool place.
- You can store the unit by hanging it by the loop (11) provided that no water gets on the unit in this position.

Delivery set

Multistylers - 1 pc.
Storage case - 1 pc.
Instruction manual - 1 pc.

Technical specifications

Power supply: 220-240 V - 50Hz
Maximal power consumption: 35W

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification

Unit operating life is 5 years**Guarantee**

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)