



ENGLISH

HAIRDRYER VT-2316 B-I

The hairdryer is intended for hair drying and styling.

TOURMALINE IONIC TECHNOLOGY

When heated by hot air, the tourmaline Tourmaline ionic coating of the grid produces negatively charged ions, that lock hair scales, remove static charge from the hair and make it silky smooth.

DESCRIPTION

1. Air supply speed switch (0/1/2)
2. Cool shot button
3. Nozzle
4. Air inlet grid
5. Foldable handle
6. Hanging loop

ATTENTION

Do not use the unit near containers filled with water (such as bath, swimming pool etc.) and in wet basements. Immediately after using the hairdryer in a bathroom, disconnect the power plug from the mains socket, as water closeness is dangerous even if the unit is switched off.

For additional protection you can install a residual current device (RCD) with nominal operation current not exceeding 30 mA into the bathroom mains; contact a specialist for installation.

SAFETY MEASURES

Before using the unit, read this instruction manual carefully, keep this manual for future reference.

Use the unit according to its intended purpose only, as it is stated in this user manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

Before using the unit for the first time, make sure that the voltage in your mains corresponds to the voltage of the unit.

To avoid fire, do not use adapters for connecting the unit to the mains.

Do not immerse the power cord and power plug into water or other liquids.

Do not touch the unit body and the power plug with wet hands.

Before using the unit, examine the power cord closely and make sure that it is not damaged. Never use the unit if the power cord or plug is damaged, if the unit works improperly or after it was dropped. Contact an authorized service center for all repair issues.

It is recommended to unravel the power cord to its full length while using the unit.

The power cord should not:

– touch hot objects,

– run over sharp edges,

– be used as a handle for carrying the unit.

Use only the attachments supplied.

Do not switch the unit on in places where aerosols are sprayed or highly inflammable liquids are used.

Hair spray should be applied only after hair styling is finished.

Do not use the unit while taking a bath.

Never leave the operating unit unattended.

Take the operating hairdryer by its handle only.

Do not place and do not keep the unit in places, where it can fall into a bath or a sink filled with water, do not immerse the unit into water or any other liquids.

If the unit is dropped into water, unplug it immediately, and only then take it out of the water.

Do not use the unit when you are drowsy.

Do not use the unit to style wet hair or synthetic wigs.

Avoid contact of hot surfaces of the unit with your face, neck or other parts of your body.

Never block the air inlets of the hairdryer, do not place the hairdryer on a soft surface, such as a bed or couch, when the air inlets may be blocked. Keep the air inlets free of lint, dust, hair etc.

Never insert any foreign objects into the unit body openings.

Avoid getting of hair into the air inlet grid during operation of the unit.

Do not direct hot air into your eyes or other heat-sensitive parts of your body.

The nozzle gets hot during operation. Let it cool down before removing the nozzle from the unit body.

Do not leave the unit unattended. Unplug the unit before cleaning it if you are not using it.

Never pull the power cord when disconnecting the unit from the mains, take the power plug and carefully remove it from the mains socket.

Do not allow children to touch the unit body and the power cord during the unit operation.

This unit is not intended for usage by children under 8 years of age.

This unit is not intended for usage by people (including children over 8) with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.

Do not teach children unattended to prevent using the unit in a try.

For children safety reasons do not leave polyethylene bags, load as packaging unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

Transport the unit in the original package only.

Keep the unit out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY.

USING THE HAIRDRIER

After unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

- Unpack the hairdryer and remove any stickers that can prevent unit operation.
- Unravel the power cord completely.
- Before switching the unit on, make sure that your home mains voltage corresponds to the unit operating voltage.
- Insert the power plug into the mains socket.
- Use the switch (1) to set the required air supply speed:
 - 0- – the hairdryer is off,
 - 1- – low air flow speed and low temperature,
 - 2- – high air flow speed and high temperature.

Note: During the first operation some foreign smell and a small amount of smoke from the heating element is possible, this is normal.

- This model has a "cool" air supply function, use it to fix your hairstyle. For "cool" air supply, switch the hairdryer on and then press and hold down the button (2).

Hair care

To get the best results, wash your hair with shampoo (before drying and styling), remove excessive moisture with a towel and comb your hair.

Quick drying

Set the switch (1) to the position -1- or -2- and dry your hair. Shake off excessive moisture from the hair with your hand or a comb and constantly move the hairdryer above your hair.

Straightening

Set the switch (1) to the position -1- or -2- and dry your hair. When the hair is almost dry, switch the unit off, install the nozzle (3) and then set the switch (1) to the position -1-.

Divide your hair into locks, start straightening from the lower layers. Using a flat or a round brush, comb the hair downwards and simultaneously direct hot air at your hair. This way, slowly straighten each lock from root to end. After you finish straightening the lower locks, start straightening the middle locks and finish with the upper locks.

Natural locks

Set the switch (1) to the position -1-, grip locks between fingers slightly, turn them in the direction of natural curling. Dry your hair, directing the airflow between fingers. To fix the styled lock, direct cool air flow at the lock. To do this, press and hold down the button (2).

Styling

Attach the nozzle (3) to the hairdryer and then set the switch (1) to the position -1-.

Divide your hair into locks and create a required hair style by means of a round hair-brush. During hair styling, direct the air flow straight at your hair.

If you want to fix the hairstyle, direct the cool air flow at each lock for 2-3 seconds. Styling time is determined individually according to hair type; you can determine it by yourself.

Overheating protection

Overheating protection switches the hairdryer off if the outgoing air is too hot. If the hairdryer has been switched off during operation, set the switch (1) to the -0- position, unplug the hairdryer into water or any other liquids, and make sure that the inlets and outlets are unblocked. Let the hairdryer cool down for 5-10 minutes and switch it on again. Do not block the air inlets during unit operation and avoid getting of hair into its air inlet.

CLEANING AND CARE

The hair dryer is intended for household usage only.

- Set the switch (1) to the -0- position, disconnect the hairdryer from the mains and let it cool down.
- Wipe the unit body with a damp cloth and then wipe it dry.
- Clean the air inlet grid (4) with a brush.
- Never immerse the unit into water or other liquids.
- Do not use abrasives and solvents to clean the unit body.

STORAGE

- Disconnect the unit from the mains and clean it.
- Never wind the cord around the hairdryer, as it can damage the unit. Handle the power cord with care, do not pull, bend or stretch it, especially near the power plug or at the junction point. Straighten the cord periodically if it gets kinked during hairdryer operation.
- You can store the hairdryer by hanging it by the loop (6) provided that no water gets on the unit in this position.
- Keep the unit away from children in a dry cool place.

DELIVERY SET

Hairdryer – 1 pc.
Instruction manual – 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz

Power consumption: 1800 W

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

Unit operating life is 3 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from which the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)



VT-2316 B-I

Hairdryer

INSTRUCTION MANUAL