



2

ENGLISH

Garment steamer

1. Power switch «ON/OFF» with illumination
2. Operation modes switch with illumination
3. Body
4. Water tank lid
5. Water tank
6. Water tank handle
7. Telescopic stand clamp
8. Steam tube fastening nut
9. Telescopic stand
10. Clamps
11. Steam tube
12. Steam tube handle
13. Hanger
14. Sprayer holder
15. Sprayer
16. Brush-attachment
17. Trousers clamp
18. Extension bar
19. Extension bar clamp

Attention!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD contact a specialist.

Safety measures

Before connecting and using the unit, read the instruction manual carefully. Follow all the warnings and operating recommendations for operation of the unit listed in this manual. Keep this manual for future reference.

- Before using, make sure that your home electricity supply corresponds to the operating voltage of the unit.
- For children safety do not leave polyethylene bags, used as a packaging, unattended. **Attention!** Do not allow children to play with polyethylene bags and film. **Danger of suffocation!**
- Place the unit on the flat, moisture-resistant surface.
- Before using the unit, closely examine the power cord and the steam tube and make sure that they are not damaged. Never use the unit if the power cord or steam tube is damaged.
- Avoid contact of power cord or steam tube with hot and sharp surfaces. Avoid damaging the isolation of power cord and steam tube.

- Use the supplied removable parts only.
- Do not use the unit without steam tube installed.
- Do not operate the unit without water, disconnect the unit from the power supply when the water tank becomes empty.
- Do not move or tilt the unit during its operation.
- Do not use soda water, any perfume additives or starch solution.
- Always unplug the unit before cleaning, maintenance works, when filling it with water or pouring the water out or if you do not use the unit.
- Do not cover the sprayer openings and avoid getting of foreign objects inside.
- Telescopic stand should be completely straightened during operation to prevent bending of the steam tube and provide free steam release.
- Do not pull the steam tube strongly to prevent damage and steam leakage. Do not use the tube for carrying the unit.
- If steam goes out of the unit body during operation, make sure that the steam tube is not compressed and the sprayer openings are not blocked.
- During operation unit surface may heat up, be careful not to burn or scald yourself.
- Do not immerse the unit, the power plug or the power cord into water or other liquids.
- Do not touch the power plug with wet hands.
- Never leave the operating unit unattended.
- Use the unit only for the intended purposes. Do not direct the sprayer at furniture, electrical appliances, books and objects, what can be damaged by moisture.
- Never steam clothes on a person as the steam temperature is very high, use a hanger.
- Clean the unit regularly.
- Never allow children to use the unit as a toy.
- This unit is not intended for usage by children or disabled persons unless they are given all the necessary instructions by a person who is responsible for their safety on safety measures and information about danger that can be caused by improper usage of the unit.
- Children and disabled people can use the unit under supervision only.
- In order not to burn yourself with hot water, disassemble the unit only after it cools down

4

ENGLISH

- completely. Removable parts should be dry and cool.
- Do not use the unit outdoors.
 - Never pull the power cord, when disconnecting the unit from the mains, take the plug and carefully pull it out of the socket.
 - Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, apply to the nearest authorized service center.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**UNIT PURPOSE**

The unit can be used for any types of clothes and fabrics. If you have doubts about steaming any certain kind of fabric or clothes you should follow manufacturer's recommendations. If such information is not available, try to steam the fabric back-side.

When steaming such fabrics as silk or corduroy, treat the fabric with steam by holding the sprayer (15) away from the material. Use the brush attachment (16) to remove unnecessary lint and threads.

BEFORE THE FIRST USE

1. Unpack the unit, remove any stickers that prevent normal operation of the unit, place the unit on a flat stable surface.

Note: In case of unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

2. Loosen the clamp (7) rotating it counterclockwise.
3. Set the telescopic stand (9) into the clamp opening (7).
4. Fix the telescopic stand rotating the clamp (7) clockwise.
5. Loosen the clamps (10), extend the stand (9) to the required length, fix the clamps (10).
6. Extend the hanger (13), set the extension bars (18) according to the **picture 1** and put the clamps (19) on.
7. Set the hanger (13) on the stand (9).
8. Fix the steam tube (11) with the nut (8) screwing it clockwise firmly. When screwing the nut (8) hold the tube with another hand in order to prevent its turning with the nut.

- Note:** When screwing the nut (8) do not apply too strong efforts.
9. Fix the sprayer (15) on the holder (14).

STEAMER OPERATION

1. Before operate the steamer fill the tank (5) with water. To remove the water tank take it by handle (6) and pull upwards.
2. Turn over the tank (5) and open the lid (4).
3. Fill the water tank (5) with water, close the lid (4).

Attention!

Before removing the water tank (5) make sure that the unit is unplugged.

Do not use hot water. To extend the operation period of the steamer it is recommended to use distilled and demineralised water. Do not switch on the unit if it is empty.

4. Set the water tank (5) to its place.
5. Fix clean clothes on the hanger (13).

Note: Be careful when fixing clean clothes on the hanger (13). Too strong pressure may cause its damage.

Never steam clothes on a person as the steam temperature is very high, use a hanger (13).

6. Connect the unit to the mains.
7. Set the switch (1) to the "ON" position, the illumination of the switches (1) and (2) will light up.
8. Select the operation mode using the switch (2).

Operating mode	Power	Steam generation
800 W	800 W	medium steam generation intensity
1600 W	1600 W	maximum steam generation intensity

9. Wait for intensive steam release from the sprayer openings (15). It will take some time.
10. Hold the sprayer (15) by the handle (12), take the sprayer (15) to the bottom of clothes item. Steam will go along the external and internal surface of fabric ironing the folds. Slowly move the sprayer (15) vertically bottom-upwards. Straighten the fabric using the free hand. Fix trousers with the trousers clamps (17).

Note: Do not allow bending of the steam tube (11).

5

ENGLISH

11. After finishing the operation of the unit set the switch to the "OFF" position and unplug the unit.
12. Let the clothes dry and cool down.

Note: Do not run the unit for more than 30 minutes continuously.
To add water to the water tank (5) switch off the unit using the switch (1) and unplug the unit.

Cleaning curtains and furniture upholstery

- Curtains and drapes may be ironed without taking them down.
- Thick fabrics may require additional steaming.
- You can also improve the external appearance of furniture upholstery by treating it with the steam.

CLEANING AND CARE

- Periodically wipe the unit body and the sprayer with a damp cloth (only after it has cooled completely).
- Wash the brush attachment (16) under water jet having preliminary removed it from the sprayer (15).

Attention! Do not wash the sprayer (15) under water jet.

- Do not use abrasives and solvents.

Scale removing

1. Pour 1 liter of water mixed with 2 tea spoons of citric acid into the water tank (5).
2. Switch on the unit setting switch (1) to the «ON» position.
3. Let the unit work until the steam release will stop completely (about 30 minutes).
4. Switch off the unit, rinse the water tank (5) with running water, fill the tank with 1 liter of clean water.
5. Let the unit work until the steam release will stop completely (about 30 minutes).

Storage

1. Unplug the unit and wait till it cools down completely.
2. Fold and detach the stand (9)
3. Detach the tube (11) unscrewing the nut (8).
4. Pour out water from the water tank (5) and the unit body (3) and dry them.
5. You can store the unit having set the stand (9) and the hanger (13) to their places and having

- wound the tube around the stand (9). Fix the sprayer (15) on the holder (14).
6. Before taking the unit away for storing, disassemble the hanger (13), take the clamps (19) off and detach the extension bars (18);
7. Keep the unit away from children in a dry cool place.

TRANSPORTATION AT LOW TEMPERATURES

1. If it is necessary to transport the unit at low temperatures pour out water from the water tank (5) and the body (3).
2. Switch on the unit setting switch (1) to the «ON» position and let it work with empty water tank for several minutes until steam release stops.

Delivery set

- Garment steamer with removable water tank – 1 pc.
Telescopic stand with sprayer – 1 pc.
Steam tube – 1 pc.
Brush attachment – 1 pc.
Hanger – 1 pc.
Extension bar with clamps – 2 pcs.
Trousers clamps – 2 pcs.
Instruction manual – 1 pc.

Technical specifications

Power supply: 220-240 V, ~ 50 Hz
Maximal power consumption: 1600 W
Water tank volume: 2.5 l

The manufacturer preserves the right to change the design and the specifications of the unit without a preliminary notification.

Service life of the unit is 3 years**GUARANTEE**

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

6



VT-3703 B-I

Garment Steamer

INSTRUCTION MANUAL