

145MM



210MM

ENGLISH

KETTLE VT-7016 W-I
The kettle is intended for water boiling.

DESCRIPTION

1. Body
2. Mesh filter
3. Lid
4. Lid opening button
5. Handle
6. Water level scale
7. On/Off button -0/1-
8. Base
9. Cord storage

Attention!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD, contact a specialist.

SAFETY MEASURES

Before using the unit, read this instruction manual carefully and keep it for future reference.
Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Make sure that operating voltage of the kettle corresponds to the voltage of your mains.

• The power cord is equipped with an "europlug"; plug it into the socket with a reliable grounding contact.

• To avoid the risk of fire, do not use adapters for connecting the kettle to the mains.

• Do not use the kettle in bathrooms. Do not use the kettle near swimming pools or other containers filled with water.

• Do not use the kettle near heat sources or open flame.

• Do not use the kettle outdoors.

• Do not leave the operating kettle unattended.

• Place the kettle on a flat stable surface, do not place the kettle on the edge of the table.

• Before switching the kettle on make sure that it is placed on the base evenly.

• Use only the base supplied with the unit.

• Do not let the cord hang from the edge of the table and make sure that the cord does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by fixing it in the cord storage.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it is standing on the base.

• Take the kettle off the base before opening the lid.

• Use the kettle only for water boiling, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark -MIN- and not above the maximal mark -MAX-. If the water level exceeds the maximal mark, boiling water can splash out from the kettle.

• To avoid burns by hot steam, do not bend over the kettle spout while it is operating.

• Do not use the kettle without the filter or if the lid is not closed tightly.

• Do not open the kettle lid while water boiling.

• Do not touch hot surfaces of the kettle; take it only by the handle.

• Be careful while carrying the kettle filled with boiling water.

• Do not remove the operating kettle from the base. Before taking the kettle off the base, switch it off by setting the on/off button to the -0- position and then remove the kettle from the base.

• Unplug the unit before cleaning or when you are not using the kettle. When unplugging the unit, do not pull the power cord, but hold the plug.

• To avoid electric shock, do not immerse the unit and the base into water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not allow children to touch the unit body and the power cord during the unit operation.

• **This unit is not intended for usage by children under 8 years of age.**

• Children aged 8 and over as well as disabled persons can use this unit only under supervision of a person who is responsible for their safety if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags used as packaging unattended.

• **Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

• Never pull the power cord when disconnecting the unit from the mains, take the power plug and carefully remove it from the mains socket.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Do not disassemble the unit by yourself, if any malfunction is detected or after the unit was dropped, apply to the nearest authorized service center.

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

• **THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**

• **BEFORE THE FIRST USE**
After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least two hours at room temperature.

• Unpack the kettle and remove any stickers that can prevent the unit operation.

– Check the unit for damages, do not use it in case of damages.

– Make sure that the unit operating voltage corresponds to the voltage of your mains.

– Insert the power plug into the mains socket.

– Take the kettle off the base (8) and open the lid (3) by pressing the button (4).

– Fill the kettle with water till the -MAX- water level mark, close the lid (3) tightly, place the kettle on the base (8).

– Switch the kettle on by pressing the -0/1- button (7), the button (7) illumination will light up.

– Once water starts boiling, the kettle will be switched off automatically, the illumination will go out. Pour water out and repeat the water boiling procedure 2-3 times.

– Before removing the kettle from the base (8), make sure that the button (7) is in the -0- position.

– After switching the kettle off, wait for 10-20 seconds, then you can switch it on again for water reboiling.

– If you have accidentally switched the kettle on with insufficient water amount, the automatic thermal switch will be on and the kettle will be switched off. In this case take the kettle off the base (8) and let it cool down for 15 minutes. Then fill the kettle with water and switch it on, the unit will operate in normal mode.

– Before cleaning disconnect the unit from the mains, pour water out and let the kettle cool down.

– Do not immerse the kettle and the base into water or any other liquids.

– Do not wash the kettle and the base in a dishwashing machine.

– Use soft detergents to remove dirt, do not use metal brushes and abrasive detergents.

– Wipe the outer surface of the kettle with a damp cloth or a sponge.

– Regularly clean the kettle filter (2) from obstruction. To do this, turn the kettle with the spout towards you, open the lid, carefully pull the filter upper part and take the filter off. Wash the filter and install it back to its place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

– Clean the kettle from scale regularly.

– Before taking the unit away for storage, unplug it, pour water out and let the unit cool down.

– Fix the power cord in the cord storage (9).

– Keep the kettle away from children in a dry cool place.

VT-7016 W-I

Kettle

INSTRUCTION MANUAL